

SC Config PC Software user guide (Ver. 230530)

Installation :

- 1/ Double click “ SCConfigSetup.exe” to run installation procedure.
- 2/ Tick “ Create a desktop shortcut” then Next... to complete installation

Additional shortcuts:

- Create a desktop shortcut


- 3/ Double click




to run the software

Remarks : if there are any notification of .dll missing, continue to install “VC_redist.x64.exe” or “VC_redist.x86.exe” depend on the windows system type.

Connecting :

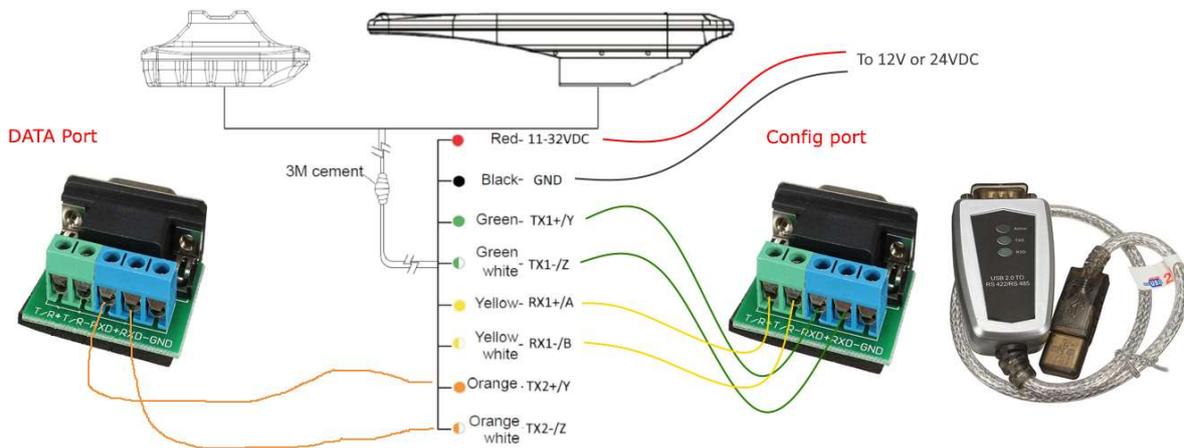

Operation :

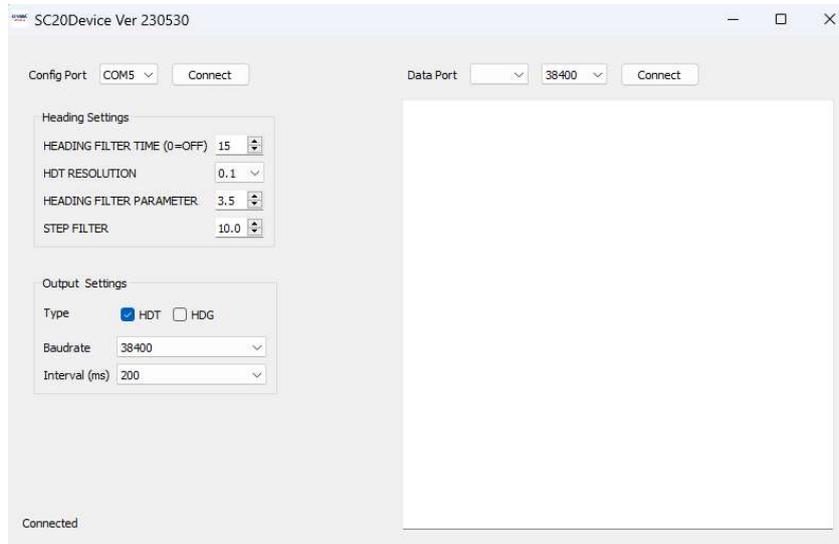

- 1/ Config port : select the correct PC COM which connect to the Satellite compass's config port
- 2/ Press " Connect" button
- 3/ Bottom left will displace " Connected" indicated the connection is correct
- 4/ "Heading Setting" and " Output Setting" to config the Satellite compass
- 5/ Data port : select the correct PC COM which connect to the Satellite compass's data port
- 6/ Select the correct baudrate (usually this baudrate automatically match to the configured baudrate).
- 7/ Press " connect" to show the output data in the lower area.

