


Operation Guide for Software Upgrade of KS200+

Before upgrading the software, you need to complete the following preparatory work:

- 1) Turn on the KS200+ device to put it into the working state.
- 2) Prepare the software program for upgrade on a PC, tablet, or mobile phone.


The following is an illustrated explanation of the software program upgrade operation on the PC:


1. Click the Internet icon in the lower - right corner of the PC, then open the WiFi list, find the device's WiFi name and click on it, and then enter the password to connect.
 - The default hotspot name format is "KS200_xxxxxxx", and the default hotspot password is 12345678.

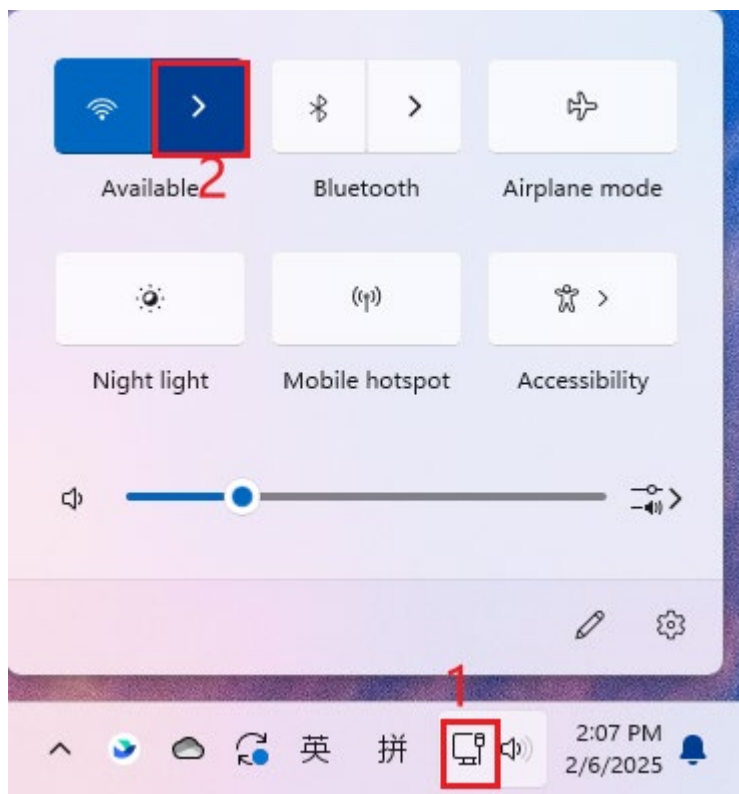



2. After the WiFi connection is successful, open the browser on the PC, enter the URL: 192.168.4.1, and press the Enter key.
3. Find the "upgrade" button at the top - right corner of the web page and click it. At this time, a file selection window will open. Locate the prepared KS200 program for upgrade, select it, and click "Open" below to directly enter the upgrade state, as shown in item "7" in the following figure.

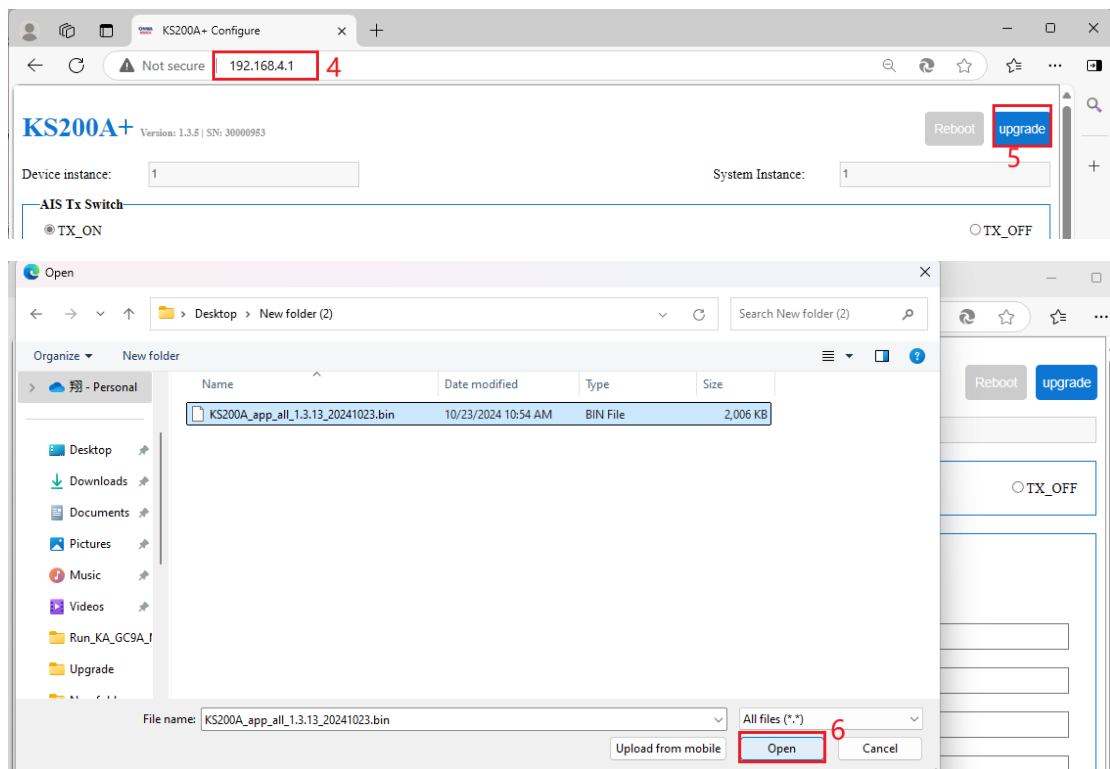

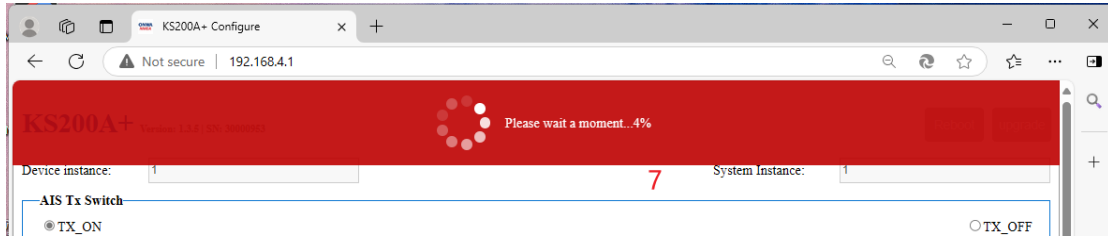

- When the situation shown as “8” in the following figure appears, it means the software program has been successfully upgraded. At this time, if the web page doesn't refresh automatically, you can refer to Step 1 to reconnect to the device's WiFi. When you open the web page at 192.168.4.1 again, you can see at the “Version” section that the program is already the latest upgraded version.

